

**PROPRESS®**

MINI



User manual

# CONTENTS

<b>1. Operating and Safety Instructions</b>	<b>2</b>
<b>2. Unpacking your Propress Mini</b>	<b>4</b>
<b>3. Familiarise yourself – Controls and First Use</b>	<b>4</b>
<b>4. Getting Started</b>	<b>6</b>
<b>5. Steam if you want to go faster</b>	<b>7</b>
5.1 Steaming Clothing	7
5.2 Curtains and Soft Furnishings	9
5.3 Health and Hygiene	9
<b>6. Care and Maintenance</b>	<b>10</b>
<b>7. Guarantee</b>	<b>10</b>

# 1. OPERATING AND SAFETY INSTRUCTIONS

Working safely with your Propress steamer is only possible when these operating and safety instructions are read completely and the contents herein are understood and followed.

Check that the specified voltage on your steamer corresponds with your country's power supply. Connecting to the wrong voltage could damage your steamer and invalidate your warranty.

Propress steamers are designed for vertical pressing of fabric and removal of creases, they should not be modified in any way to alter their operation or used for any other purpose.

Propress steamers are electrical steam generating appliances, therefore components may get very hot during use and could cause burns.

The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised instruction.

Under no circumstances should the steamer be left unattended when in operation. When not in use disconnect the power supply.

Keep children away from the steamer. Children should be supervised to ensure they do not play with the appliance.

Regularly check power cable and plug when steamer is disconnected from the power supply.

Do not use the steamer if either power cable or plug are damaged, or if it has been dropped or damaged; contact an approved service agent for repair.

Avoid use of extension cables. If you are using an extension lead, make sure it's fully unwound and correctly rated. Incorrectly rated extension cables can be dangerous and a fire risk.

Do not unplug the steamer by pulling the electric cord; always switch off at the socket and the steamer first, then firmly grip plug and pull out of socket.

Always disconnect from the power supply and wait for steamer to cool down before filling with water and dry any water spillage before connecting steamer to power supply.

Never steam yourself, others, animals or any clothing being worn.

Always wait for the steamer to cool down before putting in the travel bag or packing away.

To ensure appliance safety use only spare parts and accessories approved by the manufacturer. Do not attempt to disassemble or repair, service should only be carried out by the manufacturer or an approved service agent.

## 2. UNPACKING YOUR PROPRESS MINI


**In the box you will find the following:**


- Propress Mini Steamer
- Travel Bag
- Instruction Manual
- Steam Mitt

The Steam Mitt is to protect your hand when using the product.


**Caution:** never steam directly onto the Mitt.

## 3. FAMILIARISE YOURSELF – CONTROLS AND FIRST USE

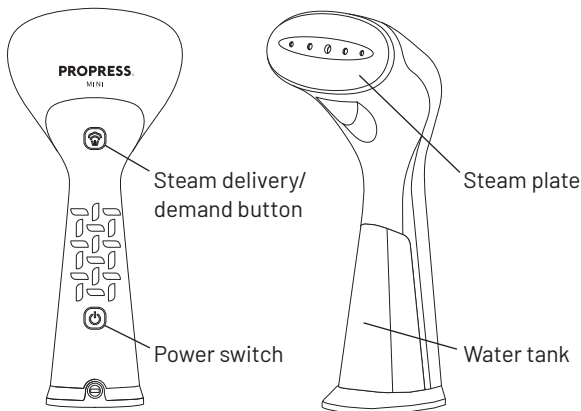


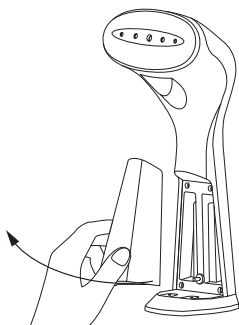

1. Unclip the tank by gripping the bottom and pulling outwards.

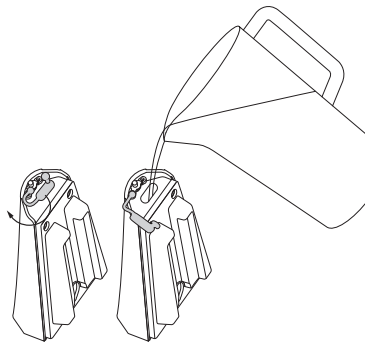

2. Lift the rubber tab on the top of the tank and fill with water.

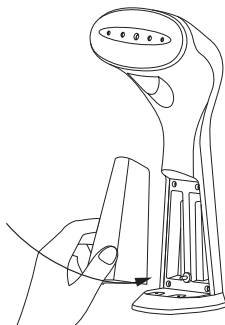

3. Replace tab and clip tank back into the steamer by inserting the top first and then firmly pressing bottom in until it clicks.



---

Do not use any additives – the use of perfume or other agents will seriously damage your steamer and void your warranty.

---










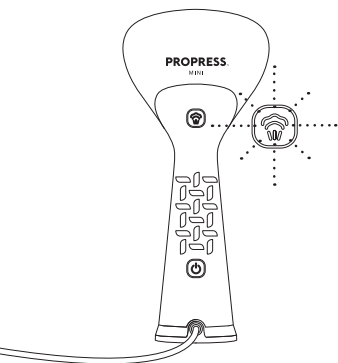

---

Use only distilled or deionised water, tap water will cause scale to build up and damage the element.

---

## 4. GETTING STARTED



1. Plug in your Propress Mini and the power switch  will illuminate red .
2. Push/depress the power button  it will turn green, at the same time the steam button  will flash red to indicate the steamer is heating.
3. When the steamer is ready to use the power light  remains green and the steam button  will have a continuous red light.
4. For on demand steam delivery, push and hold the steam button  down – it will turn green and steam will be emitted from the steam plate. When you release the button steam will stop and button will turn red.
5. For continuous steam, push the steam button  twice in quick succession, the button will flash green and steam will be continuously produced until you push the steam button again which will cancel the continuous steam function.
6. If the steamer is left for a period of 30 minutes or more without the steam button being pushed the element will switch off and the power button  will turn red. To use again press the power button to switch on.

7. To switch the steamer off push the power button, it will change from green to red.
8. Propress Mini is designed for pressing clothes and

fabrics when in the vertical position, however the water tank incorporates a dual water feed allowing it to also be used in the horizontal position if required.

## 5. STEAM IF YOU WANT TO GO FASTER 🌀

### 5.1 Steaming Clothing 🌀



Never steam clothes when they are being worn.

Garments can either be steamed on a hanger, rail, or mannequin.

Push the steam button 🌀 and run nozzle over the fabric making contact with it while holding it taut with your free hand, taking care not to steam near your hand in the process.




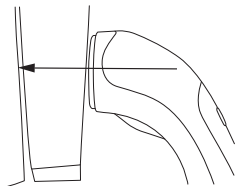


## 5.1 Steaming Clothing (continued)


Always keep the row of holes on the nozzle horizontal at all times.

You can confirm creases and pleats by steaming first and then running the steam plate over the fabric without pressing the steam button.

For larger areas you can use the continuous steam function by pushing the steam button  twice in quick succession.



---

 
 **Use extreme caution when operating the product, steam can burn.**

---

When steaming fuller garments, such as dresses and blouses, you can steam the fabric from inside by touching the steam plate on the fabric and steaming outwards.

Caution is required as steam can build up inside the garment and get extremely hot.

Steaming from the inside reduces the possibility of adding creases and opens up gathers; bringing dresses back to life.

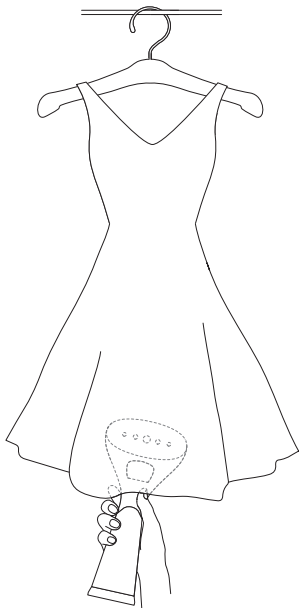

## 5.2 Steaming Curtains and Soft Furnishings

Steam curtains on the face side. If curtains are interlined, it may be necessary to steam lining as well.

Ideal for use on bed valances, chair covers, banqueting tablecloths and removing pressure marks on carpets.

Mattresses and bedding can be steamed to freshen and remove creases.

For best results always use one hand to control the fabric, taking care not to steam near your hand in the process.

## 5.3 Health and Hygiene

Steaming beds, mattresses and soft furnishings can help with the control of dust mites and bed bugs which are a major trigger for allergic reaction and asthma. Use the continuous steam function and move the steam plate slowly over the surface of the item ensuring you steam all areas. Paying particularly attention to seams and piping.

Soft toys can also be steamed to improve their appearance and help hygiene control.

## 6. MAINTENANCE AND CLEANING

To clean the steamer wipe with a soft damp cloth, do not use any detergents or cleaning agents. Do not attempt to use any descaling agent, this will damage the element. If you are in a very hard water area use distilled or bottled water.

## 7. GUARANTEE

This appliance is guaranteed in accordance with statutory/country-specific regulations (proof of purchase by invoice or delivery note required).

The guarantee covers the repair or replacement (at the discretion of Propress Ltd) of your machine or part of your machine if it is found to be defective due to faulty materials or workmanship within the guarantee period. This includes all parts and labour required to get the machine working properly without charge. In the event that the product is not repairable it may be replaced with an equivalent model of similar value.

The guarantee excludes use for commercial or hire purposes.

Normal wear and tear, non-compliance with instructions and damage from incorrect power supply are excluded from the guarantee.

Damage caused by impact, use of additives, dirty water, perfume and fabric freshening sprays is excluded from the guarantee.

The guarantee will be void if the steamer has been modified or repaired by a non-authorized repairer or if non OEM parts have been used.

In case of complaint, please send the machine dismantled, empty of water and clearly marked with your details and nature of your complaint, to your dealer.

**Model No.: PROPRESS MINI PM1000**

Power: 1350W Max

Voltage: 220/240V / 50/60 Hz

A Great British Design made in PRC



THIS APPLIANCE MUST BE EARTHED

If you have any questions or comments relating to your Propress, please contact the Propress Customer Care Team.

### **New Zealand**

Bruce Moore Enterprises Ltd  
55 Longhurst Terrace,  
Cashmere,  
Christchurch  
New Zealand

Freephone: 0508 243 629  
Cell: 027 434 1433 Email:  
bruce@bma.co.nz  
Web:propress.nz

Record your PROPRESS Steamer serial number and purchase date here for future reference.

Serial Number:

Date of Purchase:

Your Propress Mini is covered by a 12 month Propress Guarantee.

### **Head Office**

Propress Steamers  
Unit 3 The Pavilions,  
2 East Road,  
London SW19 1UW

T: +44 (0)20 8417 0660  
E: hello@propress.co.uk  
W: propress.co.uk  
   @propressuk



**PROPRESS®**